



Important information.
Read carefully.
Keep this information for further reference.

WARNING

The gate will not provide optimum performance unless it is installed correctly. For satisfactory gate operation please follow the instructions carefully.

NOTE: No guarantee will be given or responsibility accepted by the manufacturers if the gate is not installed as instructed. Barrier Group do not warrant the work of 3rd party contractors.

BEFORE YOU START

1. The installer must ensure the desired mounting point for the gate is level, plumb and rigid.
2. Use fixings appropriate to the material into which they are being fixed (not included).
3. Check all parts are included. Contact Barrier Group immediately if you are missing a piece.

AFTER INSTALLATION CARE

Barrier Group recommends that you check the operation of your gate at least every six months (more regularly in extreme environments or frequent use). It is natural for spring assistance unit to lose tension over time. Adjustment may be required.